

# 12' HAMMOCK STAND HS12


Save these instructions for future reference.  
This package includes a hammock stand only!

**HAMMOCK & HANGING HARDWARE ARE NOT INCLUDED WITH THIS STAND**



**350**  
pounds  
158.8 kg  
Weight Capacity

 
 
 
**⚠ WARNING:** Failure to read and follow instructions and safety warnings could result in serious injury or damage to property.

 Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

**⚠ CAUTION ⚠**

*This hammock stand is not designed for use as a swing. Bouncing, swinging, or any other significant movement while in use may result in serious injury.*

*This stand must be used on a level, stable surface. Make sure all connection points are fully and securely engaged before every use.*

NO.	PARTS	QTY.
A	 Leg	2
B	 Center Pole	1
C	 Upright Pole with Hook	2

**⚠ WARNING:** Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

# ASSEMBLY

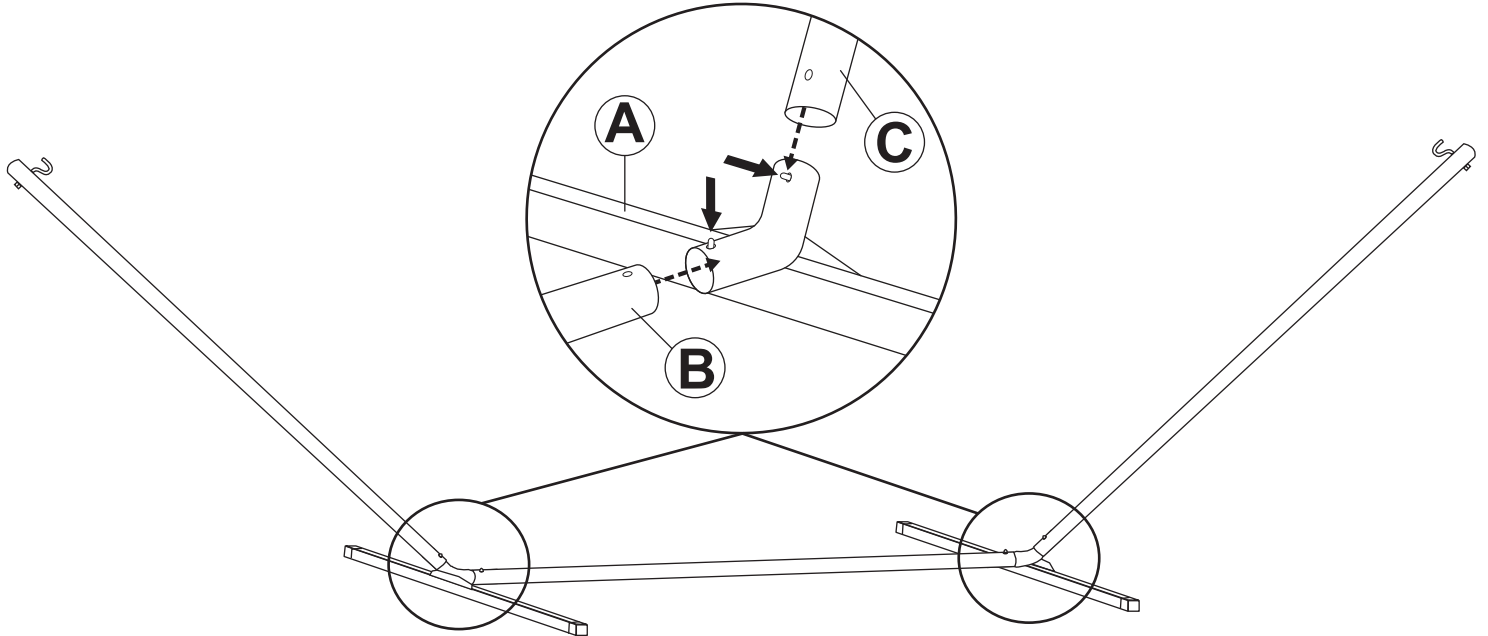
**!** Carefully read all assembly steps, care instructions, and safety information before using this product. **!**

Save these instructions for future reference.

Assemble components on a soft, clean surface to avoid scratching/damaging the finish.

**When choosing a location for your hammock stand, select a smooth, level surface.**

**Do not install on dangerous terrain or objects such as slopes, on rocks, or in bodies of water.**

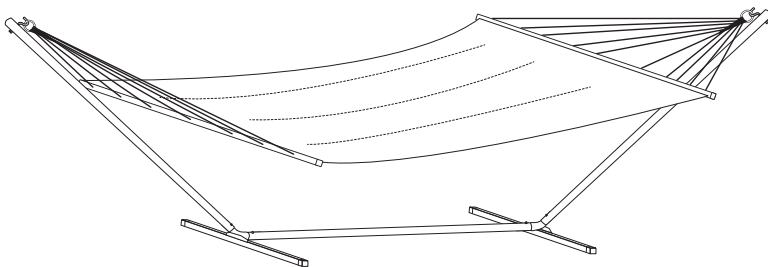


1. Place 2x Leg (A) on the ground, ensuring the elbow pipes are at a 120-degree angle.
2. Align the hole on Center Pole (B) with the spring button on Leg (A). Press the spring button down and carefully slide the center pole over the button, the spring button will snap through the hole in the center pole when it is connected. Repeat this step to connect the other leg.
3. Align the hole on Upright Pole (C) with the top spring button of the leg. Press the spring button down and carefully slide the pole over the button, the spring button will snap through the hole in the upright pole when it is connected. Repeat this step to connect the other upright pole.

## HANGING YOUR HAMMOCK (hammock not included)

**!** **HAMMOCK & HANGING HARDWARE ARE *NOT INCLUDED* WITH THIS STAND** **!**

**!** **IMPORTANT:** This stand accommodates many hammocks up to 11' in length from ring to ring. Rope-style hammocks are not recommended with this 12' stand.



Select an appropriate size hammock (not included) for this stand.

Shorter hammocks may require chains and S-hooks (not included). If necessary, adjust the length of the chains to tighten/loosen the fit of the hammock.

Always leave some slack in the fabric when hanging your hammock. Taut = tipsy!

The hammock center should be at a height where the user(s) can enter and exit the hammock safely.

Always enter and exit hammocks slowly; moving too quickly can cause the hammock and/or stand to tip over.

# GENERAL USE & CARE



**WARNING:** Do not use if parts are missing, worn, or damaged.



**WARNING:** Never leave a hammock hanging on this stand while it is not in use.



**WARNING:** Do not allow children to use this product without constant adult supervision.



**WARNING:** Always keep weight centered over the base when using this product.

**SAFE USE:** Follow all safety statements and warnings. Always move slowly when getting in and out of any hammock. This stand could cause serious injury, including, but not limited to, the stand tipping over if user(s) stand up in, swing, bounce, jump, or perform any other excessive movement while using a hammock.

**CHILDREN:** This stand is only to be used by adults and person(s) with developed motor skills who also understand the potential dangers if misused. Supervise children at all times. Never allow small or young children to enter or exit a hammock without adult assistance. Never allow or encourage children to sleep or play in a hammock. Always teach and practice safe hammock use, with and without a hammock stand.

**INSPECTION:** Frequently check the stand to confirm that snap buttons are fully engaged within the mounting holes. Do not use the stand if parts are missing, broken, damaged, or worn. Don't forget that it is also important to inspect your hammock (not included) before every use.

**COVER AND STORE:** Protect your investment by covering or storing this stand when not in use. Avoid long-term exposure to precipitation and high-moisture areas. Covering the stand will protect it from damages caused by water and sunlight. Store in a cool, dry location.

**CLEANING:** Wipe surfaces with a soft cloth and warm water. Dry the stand after cleaning to prevent rust.

**SCRATCHES:** The powder coating on the stand is tough and durable, but even under normal use, some scratching is inevitable. To avoid excessive rust, wipe scratched areas as needed to remove moisture.

# TROUBLESHOOTING

## THE STAND SEEMS UNSTABLE.

If you are unfamiliar with using a hammock stand, it can leave you feeling uneasy; take some time to get used to it. Always enter and exit your hammock slowly. Swinging or aggressive movement can easily make the stand tip over and/or cause the metal bend.

- Make sure it is on a flat, level surface.
- Ensure all components are assembled correctly and the snap buttons are fully engaged within the mounting holes.

## MY HAMMOCK HANGS TOO LOW TO THE GROUND.

- Your hammock may be too long to fit on this stand. If the hammock exceeds 11' when measured from one hanging ring to the other, it will not fit on this stand.
- Rope hammocks are not recommended with this stand; rope hammocks stretch quickly.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## **WARNING!**

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**