

 
Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

## FAIRY SHELL OUTDOOR FOUNTAIN FC-73724

Read the assembly instructions carefully and follow the care instructions.

Keep these instructions for reference and warranty.

**Select a smooth, level surface to place the fountain. Assemble this fountain on a soft, clean surface to avoid scratching or damaging the finish.**

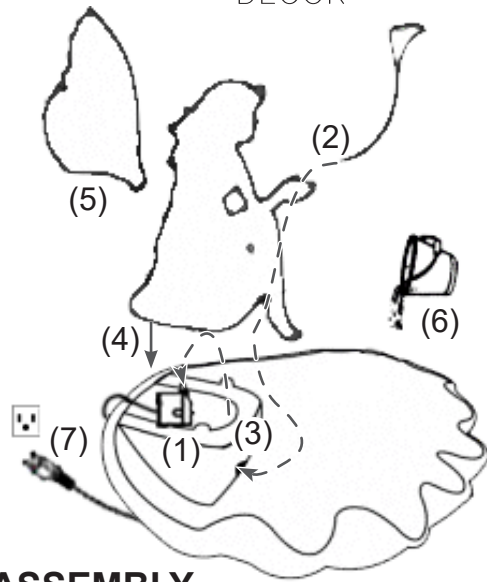

No.	PARTS	QTY.
A	Basin	1
B	Fairy	1
C	Flower	1
D	Wings	2
E	Electric Submersible Pump	1



Ensure all parts are accounted for before disposing of packaging.



2-PERSON ASSEMBLY  
RECOMMENDED

### ASSEMBLY

1. Place Pump (E) inside the reservoir of Basin (A) and run the power cord through the groove in the back of the basin.
2. Place Flower (C) through the hands and legs of Fairy (B).
3. Carefully holding the fairy and flower, run the water tube that is attached to the flower through the opening of the basin reservoir and attach the water tube to the pump.
4. Gently place the fairy on the reservoir.
5. Carefully place Wings (D) on the back of the fairy.
6. Fill the basin with enough water to fully submerge the pump.
7. Plug the power cord into a properly grounded GFCI outlet.

**Note:** When first used, there may be air in the pump. It may take several minutes for the air to escape and water begins to flow.

## ⚠ IMPORTANT INFORMATION ⚠

### USE & CARE

- For outdoor use only. Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor. Water will need to be added more often when temperatures are higher and/or the air is dry.
- Only use water in this fountain; distilled water will help prevent mineral buildup but is not required, tap water is okay to use.
- Periodically change the water to keep the water, fountain and pump clean. Remove scale and build-up regularly.  
DO NOT use harmful additives such as bleach, chlorine, etc.  
DO NOT use anything abrasive to scrub the fountain.  
DO NOT use a pressure washer.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, the fountain cracking, and/or permanent pump damage.

### TROUBLESHOOTING

- Ensure that the pump is fully submerged and add water if necessary.
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.
- Check the pump and tubing for obstructions.
- Check the flow control on the body of the pump as it may need to be adjusted to achieve the desired flow rate.
- If water is not flowing within several moments of the fountain being plugged in, unplug the power supply for a few moments and plug it back in; the pump may have air bubbles in the filter which can prevent water from circulating properly.

**Any modification to the product or failure to follow recommended care will void the product warranty.**