


X-STAND FOR HANGING HAMMOCK CHAIR DL-XHSHC

⚠ WARNING: Failure to read and follow instructions and safety warnings could result in serious injury or damage to property.

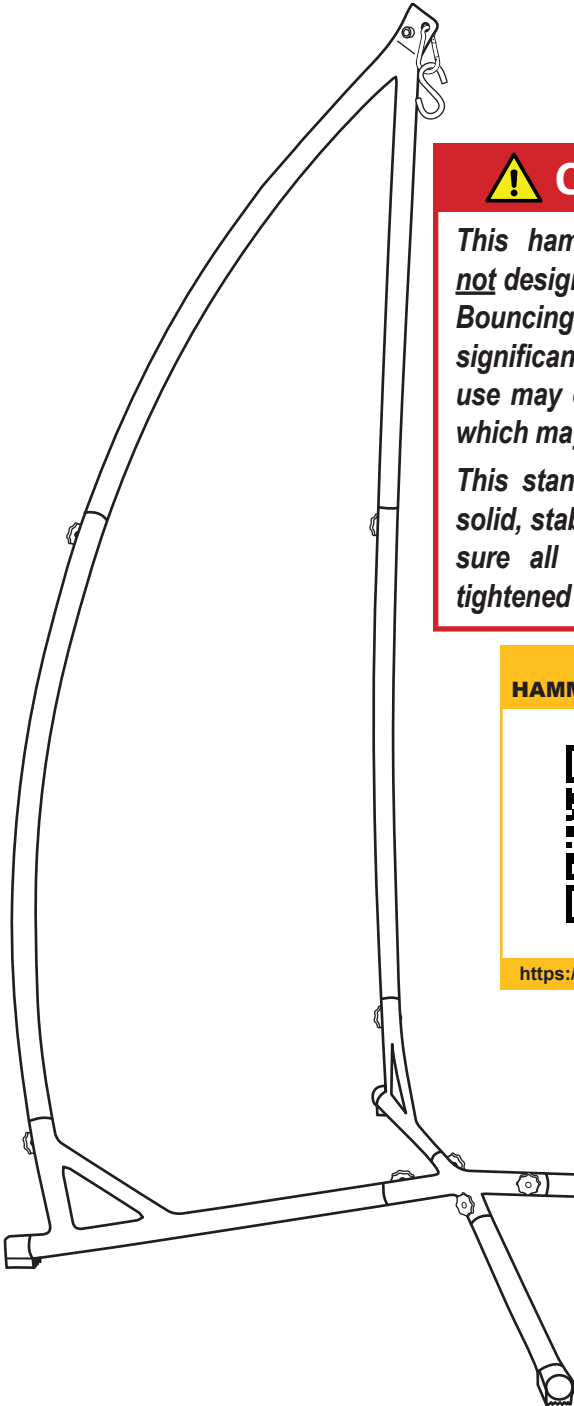

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

















⚠ CAUTION ⚠
This hammock chair stand is not designed for use as a swing. Bouncing, swinging, or any other significant movement while in use may cause the stand to tip, which may lead to serious injury. This stand must be used on a solid, stable, level surface. Make sure all hardware is securely tightened before every use.

SCAN FOR
HAMMOCK SAFETY TIPS



<https://tiny.cc/hammock-safety>

No.	PARTS	QTY.
A	 Top Support	2
B	 Back Pole	2
C	 Front Leg	2
D	 Back Leg	2
E	 X-Support	1
F	 Threaded Knob	8
G	 Foot	4
H	 M10x25mm Bolt	1
I	 Washer	1
J	 M10 Nut	1
U	 Carabiner	1
V	 S-Hook	1
Y	 Hex Key	1
Z	 Spanner	1

NOTE: Save the included tools to tighten hardware as needed.

⚠ WARNING ⚠
CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.



ASSEMBLY

! Carefully read all assembly steps, care instructions, and safety information before using this product. **!**


Save these instructions for future reference.

Assemble components on a soft, clean surface to avoid scratching/damaging the finish.

When choosing a location for your hammock stand, select a smooth, level surface.


Do not install on dangerous terrain or objects such as slopes, on rocks, or in bodies of water.

Tip: Always fully insert the hex key into the designated notch of the bolt.

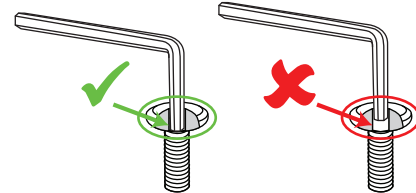

If the hex key is not fully inside the notch, the hex key could slip out, causing damage to the bolt head.

Repeated hex key slipping will cause the notch to become rounded, making it difficult or impossible to tighten the bolt with the hex key.

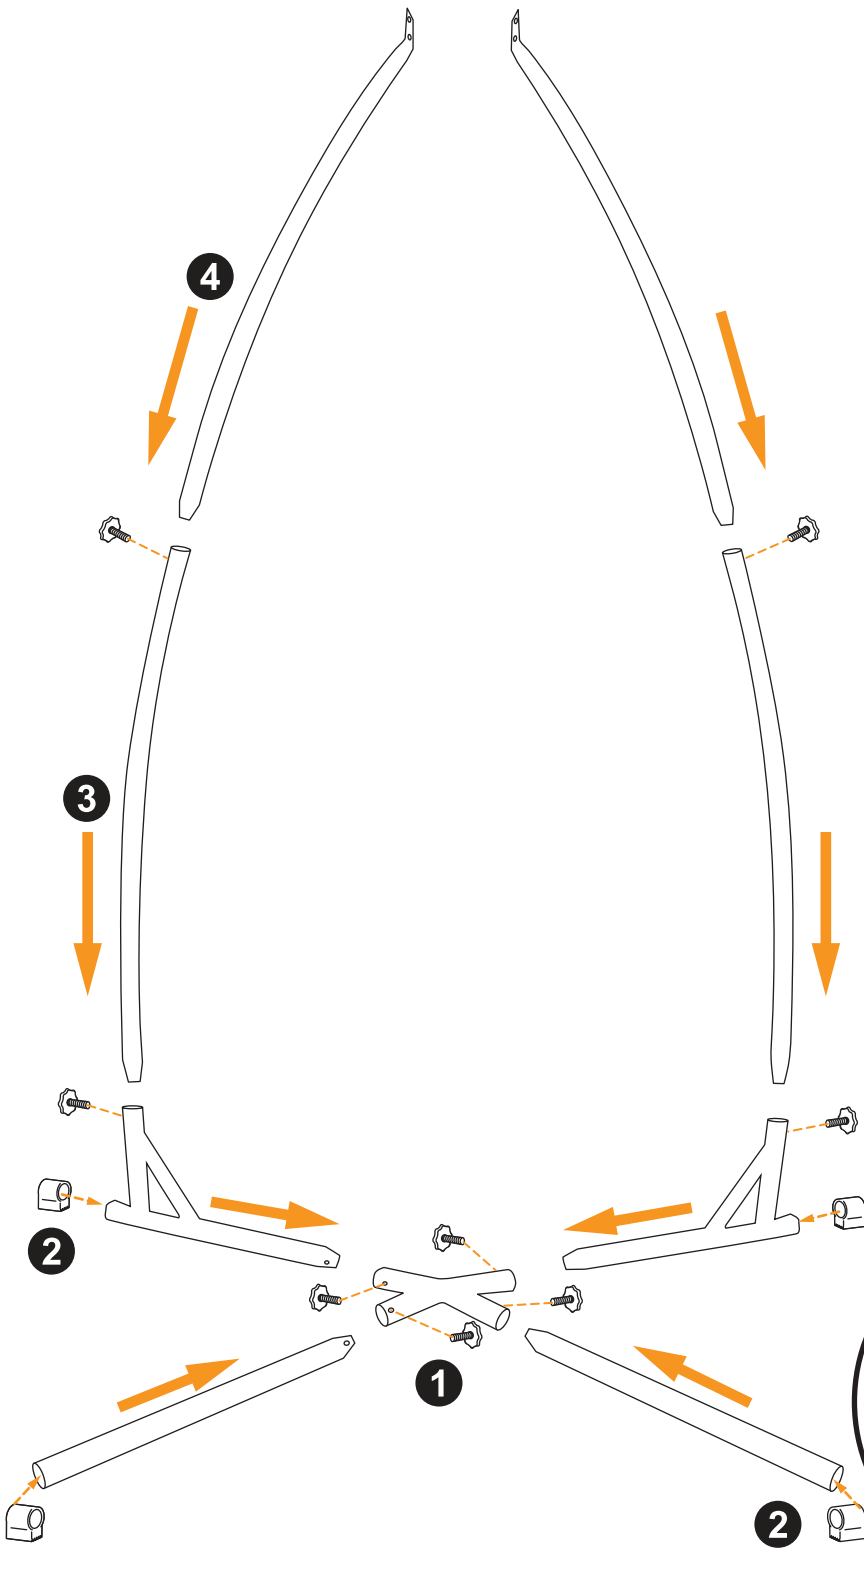

1. Attach Front Legs (C) and Back Legs (D) to X-Support (E) using Threaded Knobs (F).


2. With the textured side facing down, firmly push Foot (G) onto all legs (C and D).

3. Slide Back Poles (B) into Back Legs (D). Align the holes and secure with Threaded Knobs (F).

4. Slide Top Supports (A) into Back Poles (B). Align the holes and secure with Threaded Knobs (F).

5. Align the holes of the top supports. Secure the top with Bolt (H), Washer (I) and Nut (J) as shown in Fig. 5.

6. Insert Carabiner (U) and/or S-Hook (V) into the front-most holes in Top Supports (A).


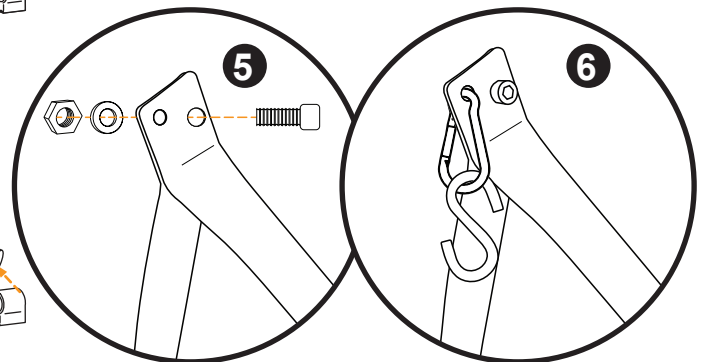


HANGING YOUR HAMMOCK CHAIR (hammock not included)

⚠ IMPORTANT: This hammock stand accommodates many (but not all) hanging chair styles. This stand is not suited for hand-woven or rope-style hanging chairs.

The seat height of the hanging hammock chair should be at a height where the user can enter and exit the hammock chair safely.

Always enter and exit hammocks slowly; moving too quickly can cause the hammock chair and/or stand to tip over. **This stand is not designed for swinging or excessive movements, as doing so may cause the stand to tip over.** It is okay to very gently sway in your hanging hammock chair as long as both feet remain firmly in contact with the ground.

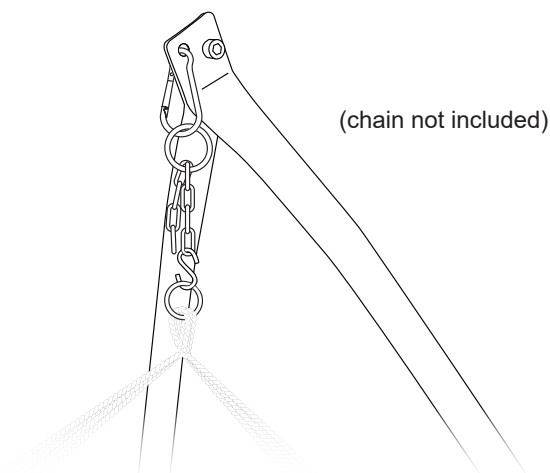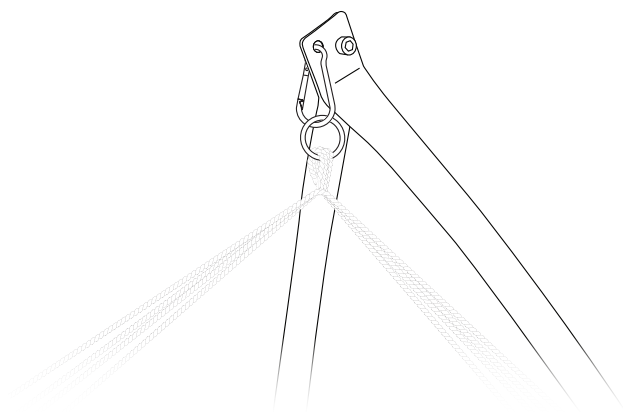

ADJUSTING HAMMOCK HEIGHT (hammock chair and chain not included)

Use the included carabiner and/or S-hook to hang your hammock chair.

If your chair is too high, you may need to purchase a Grade 30 Galvanized Chain (not included) to achieve a safe hanging height.

If a chain is used, the number of chain links between the carabiner and S-hook will determine how high or low your hammock chair hangs.

More links = closer to the ground

Less links = higher off the ground

Adjust height as needed; take into account the type of chair and the users' height and weight. The hammock stand and chair will be lower to the ground after weight is applied to them. It is normal for the stand to bend slightly downward.

BEFORE USE

- Ensure all hardware is securely fastened.
- Ensure the hanging hammock chair stand on a firm, flat, and level surface.
- Carefully read all use, care, and safety information to ensure the stand is used safely.
- Always enter and exit the hammock slowly.
- Do not swing in your hammock chair when used with this stand!

GENERAL USE & CARE



WARNING: Do not use if parts are missing, worn, or damaged.



WARNING: Never leave a hammock hanging on this stand while it is not in use.



WARNING: Do not allow children to use this product without constant adult supervision.



WARNING: Always keep weight centered over the base when using this product.

SAFE USE: Follow all safety statements and warnings. Always move slowly when getting in and out of any hammock. Do not use this chair stand for swinging. Swinging, bouncing, jumping, and other excessive movements may cause the stand to tip over or break, which may result in serious injury or property damage.

Always remove your hammock from the stand while not in use.

CHILDREN: This stand is only to be used by adults and person(s) with developed motor skills who also understand the potential dangers if hammocks and hammock stands are misused.

Supervise children at all times. Never allow small or young children to enter or exit a hanging hammock chair without adult assistance. Never allow or encourage children to sleep or play in a hammock. Always teach and practice safe hammock use, with and without a hammock stand.

INSPECTION: Frequently check the stand to confirm all hardware is securely fastened. Do not use the stand if parts are missing, broken, damaged, or worn. Don't forget, it is also important to inspect your hanging hammock chair (not included) before every use.

COVER AND STORE: Protect your investment by covering or storing this stand when not in use. Avoid long-term exposure to precipitation and high-moisture areas. Covering the stand will protect it from damages caused by water and sunlight. Store in a cool, dry location.

CLEANING: Wipe surfaces with a soft cloth and warm water. Dry the stand after cleaning to prevent rust.

SCRATCHES: The powder coating on the stand is tough and durable, but even under normal use, some scratching is inevitable. To avoid excessive rust, wipe scratched areas as needed to remove moisture.

TROUBLESHOOTING

THE STAND SEEMS UNSTABLE.

If you are unfamiliar with using a hammock stand, it can leave you feeling uneasy; take some time to get used to it. Always enter and exit your hammock slowly. Swinging or aggressive movement can easily make the stand tip over and/or cause the metal to bend.

- Make sure the stand is on a flat, level surface.
- Ensure all components are assembled correctly, and the hardware is securely fastened.

THE STAND MAKES NOISE.

If the stand is making noise when in use, check all assembly connections to make sure all hardware is fully tightened. Some noise from assembly points is normal, as this is caused by metal rubbing as weight is added to the stand.

Avoid excessive movement when using this stand as it may cause the stand to tip over or break, which may result in serious injuries.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.