

Purchase Date:	/ /	Order/Customer Reference Number


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <a href="https://tiny.cc/SunnydazeWarranty">https://tiny.cc/SunnydazeWarranty</a>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: <a href="mailto:customerservice@sunnydazedecor.com">customerservice@sunnydazedecor.com</a>, or via our contact us page at <a href="mailto:https://tiny.cc/SunnydazeContact">https://tiny.cc/SunnydazeContact</a>

# ROLLING CART WITH SWIVEL SEAT, EXTENDABLE HANDLE & PLANTER BASKET


Carefully read all assembly and care instructions before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

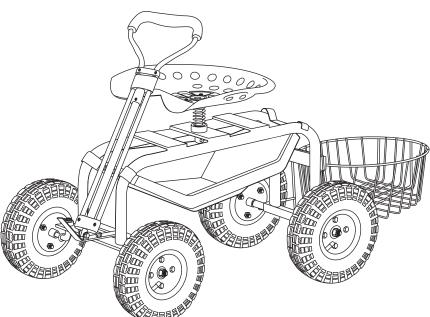


Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	F	PARTS	QTY.
A		Frame	1
В		Plastic Tray	1
С		Reinforcing Plate	2
D	Qe ex	Rear Tray Support	1
Е		Rear Axle	1
F		Axle Spacer	2
G		Wheel	4
Н	•••	Steering Connector	1
ı		Handle Connector	1
J		Handle	1
K	00000000	Seat	1
L		Basket	1

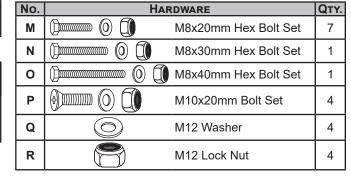



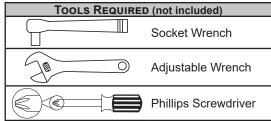

#### 🛕 WARNING 🛕

**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children and pets away during assembly.



Sunnydaze Decor advises reading this manual fully, and assemble the cart soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.


### **ASSEMBLY**

Review all steps and understand assembly before beginning.

To ensure parts fit together correctly, do not fully tighten hardware until instructed to do so.



**IMPORTANT:** Lock nuts must be installed with the nylon insert on the outside. Tools are required to fully tighten lock nuts, failure to properly tighten the lock nuts may result in product malfunction or personal injury.

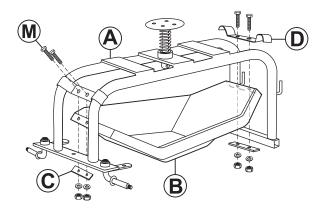

**STEP 1** A: 1 B: 1 C: 2 D: 1 M: 4




Assistance is recommended for this step.

Align the narrow end of Plastic Tray (B) with the mounting holes on the front of Frame (A). Place one Reinforcing Plate (C) on the underside of the tray and loosely fasten using two M8x20mm Hex Bolt Sets (M).


Then, align Rear Tray Support (D), the back of Tray (B) and one Reinforcing Plate (C) with the curved section on the back of the frame and <u>loosely</u> fasten by hand-tightening two M8x20mm Hex Bolt Sets (M).

DO NOT FULLY TIGHTEN HARDWARE.

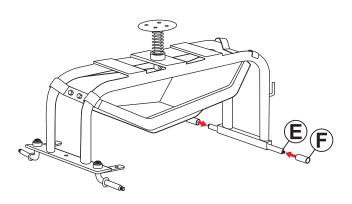

**STEP 2** E: 1 F: 2

Insert Rear Axle (E) through the back of the frame and place an Axle Spacer (F) on each side of the axle.

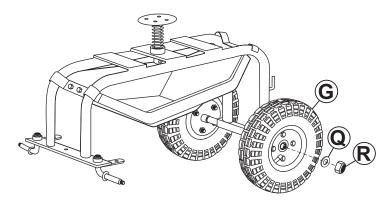


**STEP 3 G**: 2 **Q**: 2 **R**: 2

With the valve stem facing outward, place one Wheel (G) on the right side of the rear axle and loosely fasten using M12 Washer (Q) and M12 Lock Nut (R).

Repeat to loosely fasten the remaining wheel.

Evenly tighten the lock nuts.


Finish tightening the hardware used to connect the front of the tray to the front of the frame; you will fully tighten the back of the tray later.

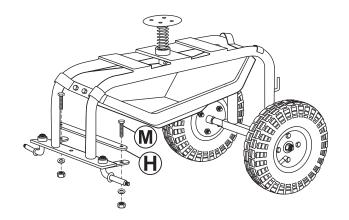

#### **STEP 4** H: 1 M: 2

**TIP:** For easier access when installing hardware, prop the front of the cart on one of the remaining tires.

Place Steering Connector (H) on top of the pivoting spindles as shown. Loosely fasten the connector to the spindles using two M8x20mm Hex Bolt Sets (M).

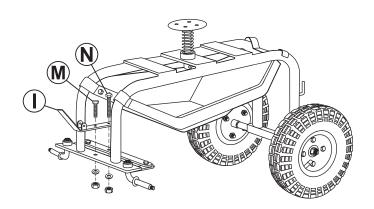


#### **STEP 5** I: 1 M: 1 N: 1

As shown, align Handle Connector (I) with the frame and steering connector.

Loosely fasten the handle connector to the steering connector using one M8x30mm Hex Bolt Set (N). Then, loosely fasten the center of the handle connector to the frame using one M8x20mm Bolt Set (M).


Tighten all lock nuts installed during Step 4 & Step 5. **IMPORTANT:** Do not fully tighten the lock nuts, as doing so will make it difficult to steer the cart.

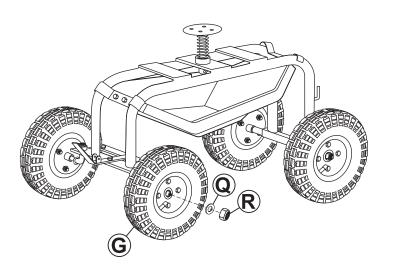

#### **STEP 6 G**: 2 **Q**: 2 **R**: 2

Place Wheel (G) onto the right spindle and securely fasten using M12 Washers (Q) and M12 Lock Nuts (R).


Repeat on the opposite side to secure the remaining wheel.

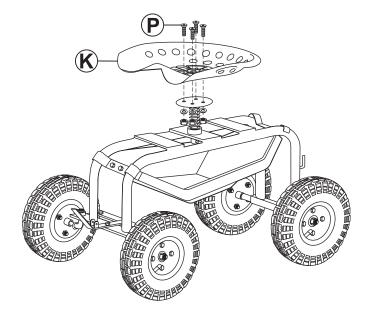

#### **STEP 7** K: 1 P: 4


Turn the seat mount counterclockwise to raise it from the frame.

Align Seat (K) with the seat mount and hand-tighten four M10x20mm Bolt Sets (P). After all bolts are loosely fastened, securely fasten seat bolts.

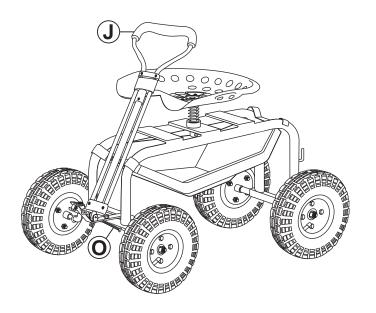

#### **STEP 8** J: 1 O: 1

Align Handle (J) with the handle connector and firmly secure using one M8x40mm Bolt Set (O).

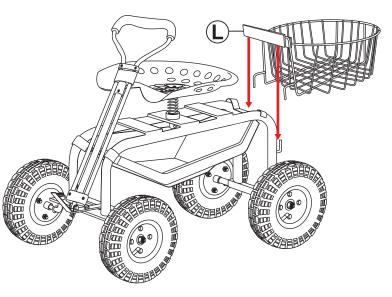

#### **STEP 9** L: 1

Hang the solid plate on Basket (L) over the hooks on the back of the cart with the bottom hooks resting against the outside of the frame

**NOTE:** The basket is designed to be easily removed.

## **Care & Maintenance**

Do not use harsh chemicals or abrasive materials to clean the cart.

**INSPECT:** Periodically check tire pressure; tire pressure should be maintained between 26-30 PSI. Frequently inspect hardware and tighten any loose fittings.

**SUN EXPOSURE:** All materials will eventually fade and degrade from sun exposure. Maintain the color and quality of the cart by storing it indoors when not in use.

**STORAGE:** Move the cart to an indoor location that is cool and dry to help preserve the cart's quality and prevent exposed metal components from rusting.

**SCRATCHES:** The powder coating on the cart is tough and durable. However, even under normal use, some scratching is inevitable. Scratches can be repaired with rust-resistant paint; consult your local hardware store and follow the paint application noted on the container. **IMPORTANT NOTE:** Repair scratches at your own risk; any and all damage caused by repairing scratches will automatically void the product warranty.

**WARNING:** THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR TOUCH-UP PAINT.

# **A** IMPORTANT SAFETY INFORMATION **A**

**ALWAYS** ensure weight is evenly distributed when loading the cart

MAX LOAD: 300 lbs. NEVER OVERLOAD THIS CART MAX TRAY CAPACITY: 5 lbs. DO NOT OVERLOAD

**DO NOT** inflate tires more than 30 PSI

**DO NOT** operate if any part is damaged or broken

**DO NOT** use on steep inclines

**DO NOT** allow children to use this cart — **THIS IS NOT A TOY!** 

**DO NOT** use a pressure washer, harsh chemicals, or abrasive materials to clean

**NEVER** stand on any part of the unit

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

## **≜WARNING!**

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

CP 04/2022 Page 5 / 5